



All models except 140

## Special tools

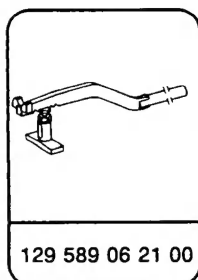

- Position special tool (090) 129 589 06 21 00 under ball joint (arrow).

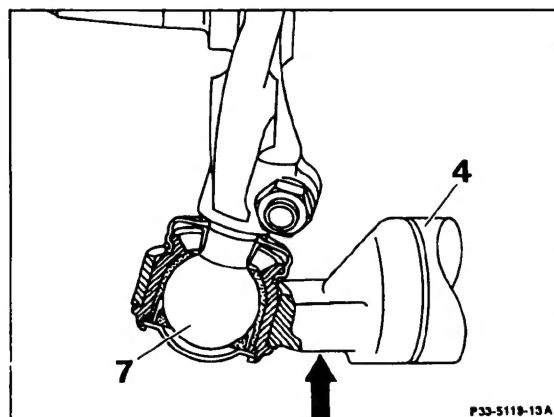

- By lifting/lowering - loading/unloading wheel at the control arm (4), an assistant can determine if any play (a) exists between the standing and lifted positions of the wheel.
- If play is found in the control arm, ball joint or control arm (on versions with integral ball joints) must be replaced on separate order.

